

## Resolución de problemas

### El control remoto no maneja el dispositivo.

- Instale baterías nuevas. (Quizás deba volver a programar el control remoto luego de instalar baterías nuevas).
- Puede que el control remoto no sea compatible con el dispositivo.

### El control remoto no maneja algunas funciones del dispositivo.

- A veces un código particular podría manejar algunas funciones pero no todas. Intente programar el control remoto con un código nuevo.
- Quizás el control remoto no puede manejar todas las funciones del dispositivo o los nombres de los botones son diferentes de los del dispositivo.

Para obtener ayuda con la CONFIGURACIÓN, llame al 1-610-336-1330

## Garantía limitada de 1 año

Este producto ha sido fabricado bajo especificaciones y controles de calidad rigurosos, y AmerTac le garantiza a usted, el comprador original, que bajo condiciones de uso normal, el producto estará libre de defectos en materiales y mano de obra por un período de 1 año, durante el cual United, el comprador original, está en posesión del mismo. No incluye focos.

Si se determina que este dispositivo presenta defectos, deberá ser reparado por un proveedor junto con una prueba de compra (por ejemplo, factura de venta facturada, código de barras UPC del empaque original) a AmerTac, Attn: Return Department, 251 Boulder Drive, Breinigsville, PA 19031.

Las obligaciones de la Compañía se limitan al reemplazo o reembolso del costo de compra de este producto y no incluyen ninguna responsabilidad por daños, por acciones debidas a accidentes, negligencia, mal uso, alteración, uso comercial o instalación inadecuada de este producto.

Esta garantía no cubre un producto alquilado, que se lo haya hecho ensamblar o que se haya utilizado fuera de Estados Unidos o Canadá. Esta garantía no es transferible.

Esta garantía reemplaza cualquier otra responsabilidad o garantías expresas. Cualquier garantía implícita, incluyendo cualquier garantía implícita de comerciabilidad o de adecuación para un uso en particular, están limitados a la duración de la garantía. En ningún caso la Compañía será responsable por daños secundarios o incidentales. Ninguna persona ni representante, qué autoridad o acción, a nombre de la Compañía, ninguna responsabilidad tal como la expresada aquí es otorgada con la venta de este producto.

Algunas estados/provincias no permiten limitaciones sobre la duración de una garantía implícita o la exclusión o la limitación de daños incidentales o emergentes, de modo que es posible que las limitaciones o exclusiones americanas no apliquen en su caso. Esta garantía también está sujeta a leyes locales, y también puede estar otros derechos que varían de un estado o provincia a otro.

©2016 AmerTac™  
250 Boulder Drive  
Breinigsville, PA 19031  
www.amertac.com

Made in China / Fabriqué en Chine / Hecho en China.

# LG01V2

## Owner's Manual

## Manuel du propriétaire Manual del propietario



## Table of Contents

Introduction	2
Button Functions	3-4
Setup	5
Battery Installation	5
Battery Saver	5
Code Saver	5
Programming Your Remote	5
Troubleshooting	6
Warranty	6
Manuel d' instruction	8
Instrucciones en español	12


## Introduction

Congratulations on your purchase of this Universal Remote Control. Universal Remotes let you replace a broken or lost remote or combine more than one remote into one.

This remote control operates the common features of most but not all models and brands of IR Infrared Controlled Video Equipment. This remote may provide functions that are not available on your equipment. Some functions of your particular equipment (e.g. menu functions) may not be controlled by this remote. In such cases, use the original remote control for your equipment. Please use this manual to become familiar with your Universal Remote. After you are familiar with your remote the first thing you need to do is install batteries and setup your remote for your particular product and brand.

Thank you for buying this remote and we hope it will give you many years of service.

## Button Functions

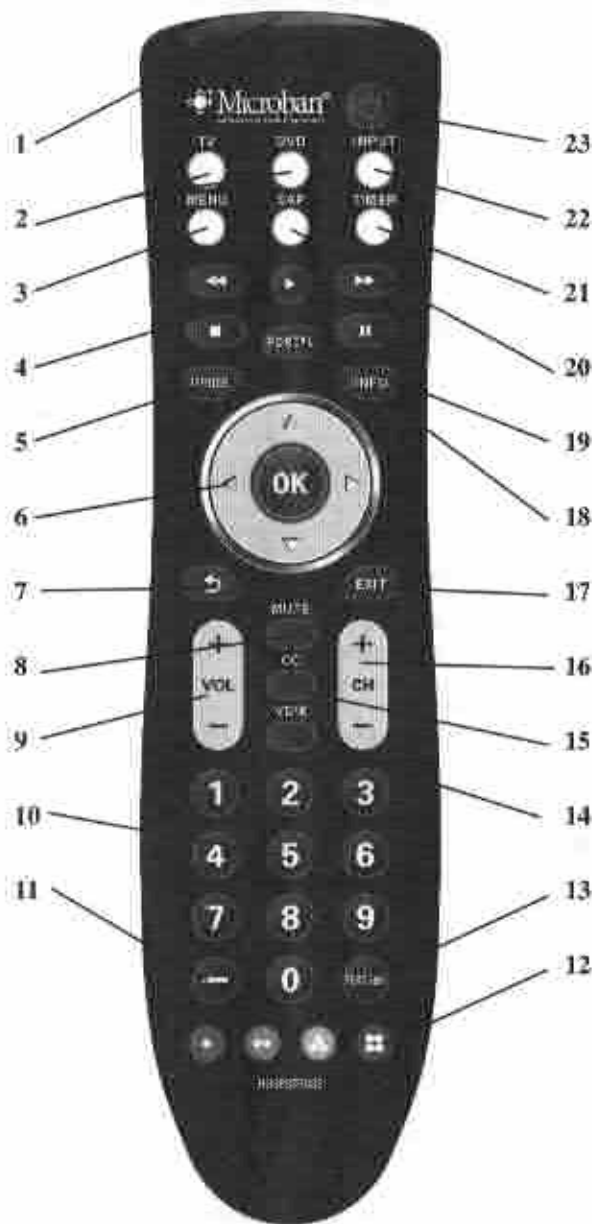

Note: Some buttons on the remote might have functions that are referred to by different names on the device you are controlling. E.G. **PREV** may be called **RECALL**, or **ENTER** may be called **DISPLAY**. These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. E.G., your product must have **PREV** ability for the **PREV** button to operate this feature.

## Button Functions (continued)

1. **Red Indicator** Lights when most buttons are pressed.
2. **TV/DVD** Selects the remote's operating mode: TV or DVD.
3. **MENU** Displays the main menu.
4. **TV/DVD control buttons.** Control TV or DVD players.
5. **GUIDE** Displays and removes the electronic channel guide.
6. **Arrows (Up/Down/Left/Right) & OK** Use to navigate on-screen menus, direct time channels, and adjust TV settings.
7. **ARROW** Turn to last menu viewed.
8. **MUTE** Switches the sound on or off.
9. **VOLUME UP/DOWN** Adjusts the volume.
10. **NUMBERS** Enters channel numbers or other numbers required. Also supports characters.
11. **DASH** Selects a program number for multiple program channels, such as 2-1, 2-2, etc.
12. **COLOR BUTTONS** Accesses special functions in some menus.
13. **FLASHBK** Turns to the last channel or input viewed.
14. **VD\*** Video description is audio-narrated descriptions of a television program's key visual elements. These descriptions are inserted into natural pauses in the program's dialogue. Video description makes TV programming more accessible to individuals who are blind or visually impaired.\*\*
15. **CC (SUBTITLE)** Activates subtitles, unless the Channel Preview/Banks Setup Menu is currently on the screen, in which case this option displays the Lock (V-Chip) Menu.
16. **CHANNEL UP/DOWN** Changes the channels.
17. **EXIT** Clears all on-screen displays and returns to TV viewing from any menu.
18. **INFO** Displays channel information.
19. **PORTAL** Displays and removes the hotel interactive menu.
20. **SAP** Analog mode: Selects MTS sound (Mono, stereo, or a SAP). DTV mode: Changes the audio language.
21. **TIMER** Turns the TV off in a set amount of time.
22. **INPUT** Rotates through inputs. Also switches the TV on from standby.
23. **POWER** Turn product On or Off.

### \*\* Availability of Video Description

FCC rules require local TV stations (affiliates of ABC, CBS, Fox, and NBC located in the top 25 TV markets) to provide 50 hours per calendar quarter (about 4 hours per week) of video-described prime time and/or children's programming.

\*Local TV stations in markets smaller than the top 25 also may provide video description. Check with your local TV station.

\*Many Public Broadcasting System (PBS) stations also provide video description on a number of programs. Check with your local PBS station.

\*The requirement to provide video description is extended to local TV station affiliates of ABC, CBS, Fox, and NBC located in the top 50 television markets beginning July 1, 2015.

## Setup

Your universal remote requires (2) AAA alkaline batteries (not included).

### Battery Installation

1. On the back of the remote, lift clip and remove cover.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AAA Alkaline batteries.
3. Press the battery cover back into place.
4. If your remote stops working, replace the batteries with new ones. The remote will retain the codes you have programmed for up to 10 minutes after the batteries are removed.

### Battery Saver

Your remote automatically turns off if the buttons are depressed more than 8 seconds (example: your remote drops between your sofa cushions).

### Code Saver

You will have up to 10 minutes to change the batteries in your remote without losing codes you have programmed. However, do not press any buttons until batteries are installed in the remote. If buttons are pressed without batteries in the remote, all codes will be lost.

## Programming Your Remote

Your remote control is designed to control multiple TV/STB/DVD devices using only one remote. To shift one to another, you need press below buttons:

- DVD, press DVD for key
- TV bed 0 (default), press TV hot key, then hold OK and 0 simultaneously for 5s
- TV bed 1, press TV hot key, then hold OK and 1 simultaneously for 5s
- TV bed 2, press TV hot key, then hold OK and 2 simultaneously for 5s
- TV bed 3, press TV hot key, then hold OK and 3 simultaneously for 5s
- TV bed 4, press TV hot key, then hold OK and 4 simultaneously for 5s
- TV bed 5, press TV hot key, then hold OK and 5 simultaneously for 5s
- TV bed 6, press TV hot key, then hold OK and 6 simultaneously for 5s
- TV bed 7, press TV hot key, then hold OK and 7 simultaneously for 5s
- TV bed 8, press TV hot key, then hold OK and 8 simultaneously for 5s
- TV bed 9, press TV hot key, then hold OK and 9 simultaneously for 5s

Once successful, red indicator will keep on for around 2 seconds and turn off.

## Troubleshooting

### Remote does not operate your device.

- Install new batteries. (You might have to reprogram your remote after installing new batteries)
- Remote may not be compatible with your device.

### Remote does not operate some features of your device.

- Sometimes a particular code might operate some features but not all. Try programming remote with a new code.
- Remote may not be able to operate all features of your device or button names might be different than your device.

For Help with SETUP call 610-336-1330

## 1 Year Limited Warranty

This product has been manufactured under rigid quality specifications and control and is warranted by AmerTac Inc. under normal use and conditions, to be free of defects in material and workmanship for a period of 1 year that you, the original purchaser, own it.

Should this device be proven defective, please return it, prepaid, along with proof of purchase (i.e. dated bill of sale, UPC barcode from original package) to: AmerTac, Attn: Returns Department, 250 Boulder Drive, Breinigsville, PA 18031.

The Company's obligations are limited to replacement or refund of purchase price of this product and do not include any liability for damages for claims because of accidents, negligence, misuse, alteration, commercial use, or improper installation.

This warranty does not cover products purchased, serviced or otherwise used outside the United States or Canada. This warranty is not transferable.

This warranty is in lieu of all other express warranties or liabilities. Any implied warranties, including any implied warranty of merchantability or fitness for a particular use, shall be limited to duration of the warranty. In no case shall the Company be liable for any consequential or incidental damages whatsoever. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

## Table des matières

Introduction	7
Fonctions des boutons	8-9
Configuration	10
Installation des piles	10
Économiseur de piles	10
Enregistreur de codes	10
Programmation de la télécommande	11
Dépannage	11
Garantie	12

## Introduction

Félicitations pour l'achat de cette télécommande universelle. Les télécommandes universelles permettent de remplacer une télécommande cassée ou perdue, ou d'en associer plusieurs.

Cette télécommande permet d'exécuter les fonctions courantes de la plupart, mais pas de la totalité des modèles et des marques d'appareils vidéo à commandes infrarouges. Cette télécommande peut fournir des fonctions qui ne sont pas disponibles sur votre appareil. Il est possible que certaines fonctions de votre appareil (par exemple les fonctions du menu) ne puissent pas être commandées par cette télécommande. Dans ce cas, utilisez la télécommande d'origine de votre appareil. Utilisez ce manuel pour vous familiariser avec votre télécommande universelle. Une fois familiarisé(e) avec votre télécommande, la première chose à faire est d'installer les piles et de configurer la télécommande pour votre appareil ou marque spécifique.

Merci d'avoir acheté cette télécommande. Nous espérons qu'elle vous sera utile pendant de nombreuses années.